

Page 35



PCS: Plaster Channel Screed

Page 35




PSV: Plywood Style Vent

Page 36



PWC: Plaster Water-Resistant Channel

Page 36

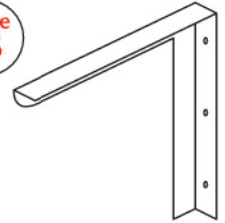

S-B: Counter Support Bracket

Page 36




SBS: BugStop® Soffit Vent

Page 36



SBW: Santa Barbara Weep Screed™

Page 37

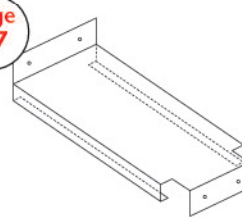

SBX: Stud Blocking

Page 37



SDE: #12 Soffit Drip Edge™

Page 37



SES: EmberStop® Soffit Vent

Page 37



SFC: Short Flange Casing

Page 38




SFC88: Short Flange Casing Bead 88

Page 38



SFS: Single Flange Screed

Page 38

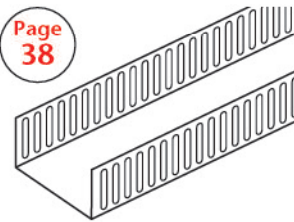

SLT: Slotted Slip Track

Page 38



SPS: Single Point Screed

Page 39



SRWS: #6 Solid Return Weep Screed

Page 39



SSF: #3 Stucco Screed Flashing

Page 39



SSM: Step Separation Mold

Page 39




SST: #36 Weep Screed

Page 40



STM: Soffit Transition Mold

Page 40

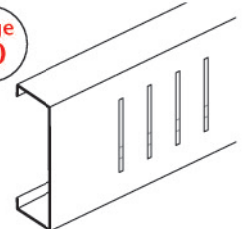

STS: Slotted Stud Sticker