

Page 20



NEW

BFC: Breakaway Form Clip (Angles)


Page 20



NEW


BJB: Bullnose J Bead

Page 20

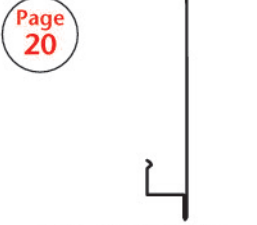

BSS: #10 Blind Stop

Page 20



C-G: Chamfer Groove

Page 21



NEW

CIC: #9 Control Joint

Page 21



CPB: Casing Plaster Bead

Page 21




CSB: Casing Starter Bead

Page 21



CSJ: Corner Slip Joint (2 Piece)

Page 22

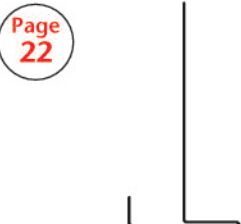

CTM: Corner Transition Mold

Page 22




D-T: Slotted Drift Track

Page 22




DLT: Deep Leg Track

Page 22

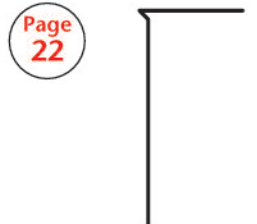


DTE: Drywall Termination Edge

Page 23



DTR: Drywall Termination Reveal

Page 23



DVG: Double V Groove

Page 23



DWR: Drywall Reveal


Page 24



NEW

DWS: DripWave® Weep Screenshot

Page 24

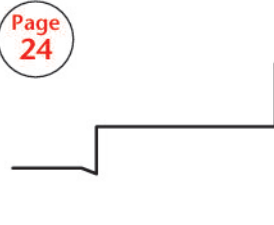


DWT: Drywall Wall Trim

Page 24



ECP: End Cap

Page 24

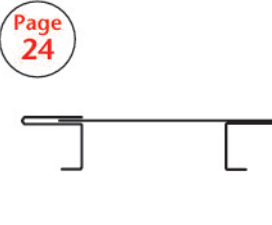

ECS: Channel Vent Screenshot (2 Piece)

Page 25



ECX: End Cap With Tapeable Flange