



Page 43

J-B: J Bead

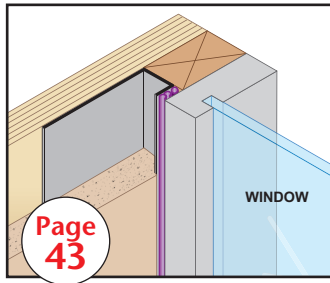


Page 43

JCB: J Caulking Bead

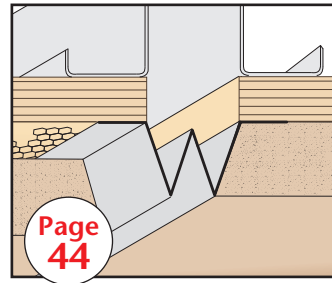


Page 44

M-S: M Scream

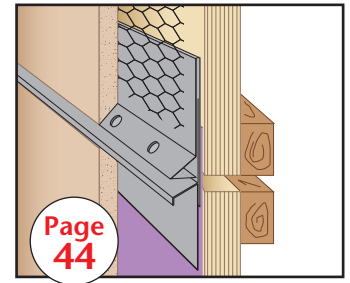


Page 44

MSX: M-Slide Expansion Joint - 2 pc.

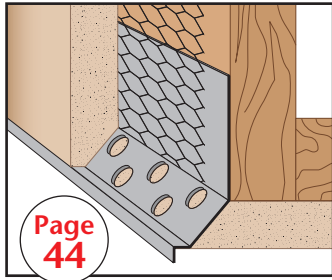


Page 44

NFD: #5 Drip

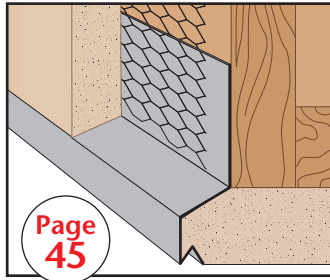


Page 45

NTD: #2 Drip

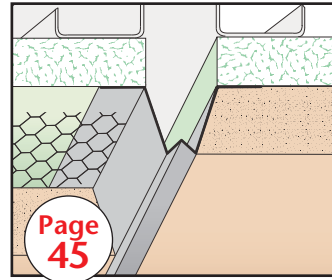


Page 45

NVS: Narrow "V" Scream

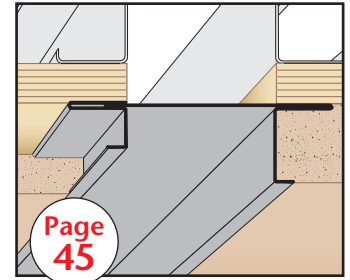


Page 45

OEC: Offset Expansion Channel Scream - 2 pc.

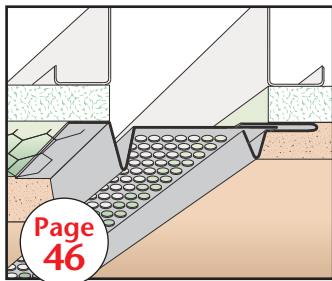


Page 46

OES: Offset Expansion Scream - 2 pc.

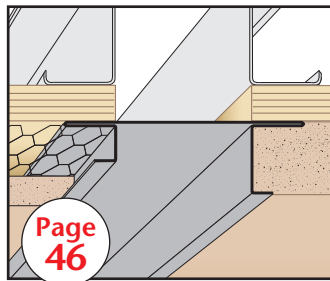


Page 46

OPC: Offset Plaster Channel Scream

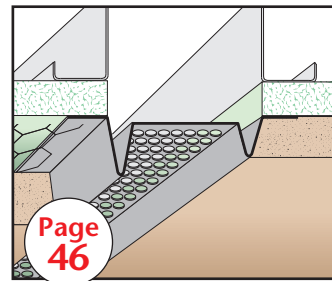


Page 46

OVS: Offset Vent/Reveal Scream

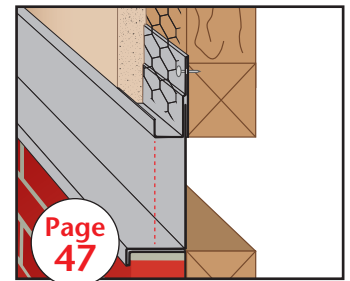


Page 47

OWC: Offset Water-Resistant Expansion Channel - 2 pc.

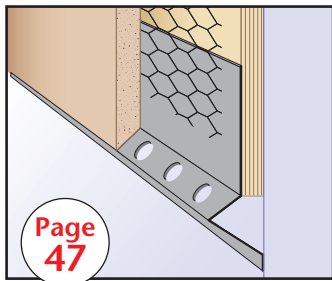


Page 47

OWS: Offset Weep Scream

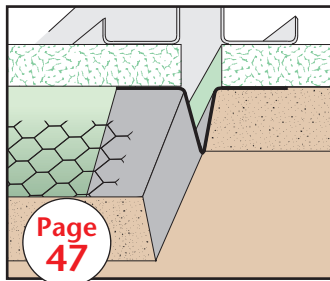


Page 47

PBS: Pointed Base Scream

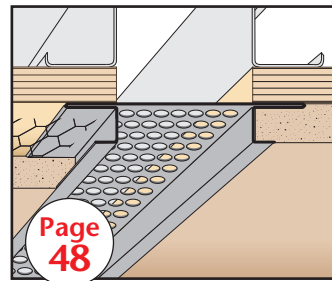


Page 48

PCS: Plaster Channel Scream

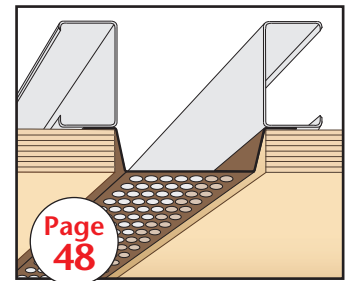


Page 48

PSV: Plywood Style Vent

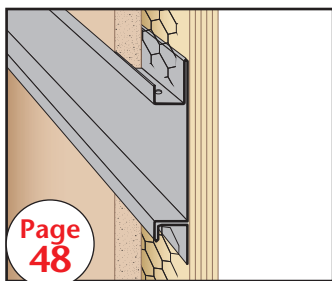


Page 48

PWC: Plaster Water-Resistant Channel

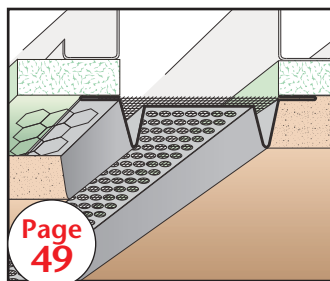


Page 49

SBS: Bug Stop™ Soffit Vent

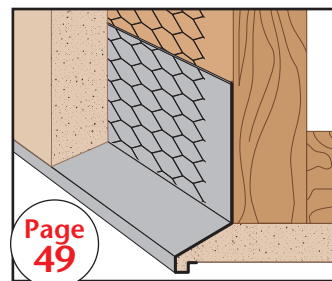

Page 49

SDC: Soffit Drip Corner (#12)

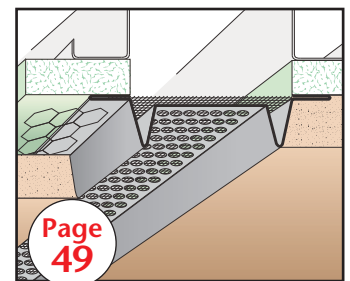

Page 49

SES: Ember Stop™ Soffit Vent